



HF4

FOUR-STAGE WATER FILTRATION SYSTEM

1. CONNECT $\frac{3}{4}$ INCH HOSE TO SUCTION INLET OF PUMP
2. CONNECT $\frac{3}{4}$ INCH HOSE TO DISCHARGE OUTLET
3. REMOVE PRIMING PLUG ON THE TOP OF THE PUMP HOUSING, AND POUR WATER INTO THE PUMP HOUSING TO PRIME THE PUMP.
4. REINSTALL THE PLUG INTO THE PUMP HOUSING.
CAUTION! OPERATING THE PUMP WITHOUT PRIMING WILL RESULT IN DAMAGE!
5. PLUG ELECTRICAL CORD INTO 110VAC, PRESS THE RESET BUTTON ON THE GFCI RECEPTACLE (GROUND FAULT INTERRUPTER).
6. PUSH AND HOLD THE GREEN START/RUN BUTTON ON THE PRESSURE SWITCH. HOLD FOR 20 SECONDS AND RELEASE.
7. REPEAT STEPS 3 THROUGH 6 IF PUMP DOES NOT CONTINUEING OPERATING ONCE THE START BUTTON IS RELEASED. MAY NOT HAVE SUFFIECENT PRIME.