

---

## *Sure Clean I Build-up Instructions*

- 1. Place bag and grid on ground. Approximately 4 square meters of flat ground space are required to erect Sure Clean I.**



- 2. Open shower bag and remove all shower components.**




- 3. Frame base tubes are pinned at each corner. Base frame consists of 2 lateral pipes and 2 end tubes.**



4. Assemble all four base tubes and place the containment pool over the completed base making sure the elastic cords at each corner are properly stretched over the elbows.



5. Place lower spray boom in corner socket making sure spray nozzles are directed toward the center of the shower. Now place upper spray arch on to flange of lower spray boom making sure the o-ring is properly seated in the groove. Tighten the sealing nut to assure a good seal between the parts.

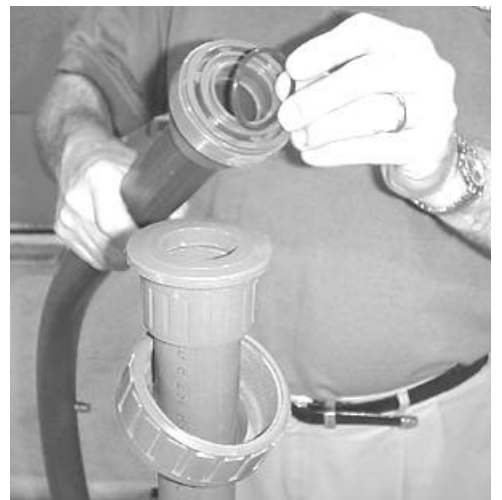

6. The completed spray column.



**7. Now simply place the remaining columns in the remaining sockets.**



**8. Join all four arches by placing the connecting beam.**



**9. Next place the fabric top over the frame.**



**10. The fabric top is attached to the containment pool by the sections of magic tape.**



**11. Now the door can be rolled up for access.**



**12. The rolled up door can be fastened by the straps of magic tape located inside the top.**



**13. Sure Clean I is now ready for use.**



**Phone 800-927-2271 Fax 713-987-0355**  
**www.acsi-us.com**  
**8720 Lambright Road Houston, TX 77075**